

Single-phase Top/Bottom Terminal SSR with Integrated Heatsink [Voltage Input Type]



SRH1 Series PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- High heat dissipation efficiency with ceramic PCB and integrated heatsink
- Input Indicator (green)
- DIN rail mount or panel mount installation
- Zero cross turn-on / Random turn-on models available

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Install the unit on DIN rail or panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- 06. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- 03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.
- 04. Since leakage current still flows right after turning off the power or in the output OFF status, do not touch the load terminal.**
Failure to follow this instruction may result in electric shock.

Cautions during Use

- Follow instructions in 'Cautions during Use'.
Otherwise, it may cause unexpected accidents.
- 4 - 30 VDC \equiv , 24 VAC \sim model power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install the unit in the well ventilated place.
- Ground the heatsink, panel, or DIN rail. Failure to follow this instruction may result in electric shock.
- While supplying power to the load or right after turning off the power of the load, do not touch the body and heat sink. Failure to follow this instruction may result in burn due to high temperature of the surface.
- In order to protect the product from the short-circuit current of the load, use rapid fuse of which I²t is under the 1/2 of SSR I²t. When short-circuited, replace the fuse to those of same specification with the used rapid fuse.
- Install dummy resistance in parallel with the load, to keep the sum of current flowing in the load and dummy resistance being over SSR minimum load current.
- When using random turn-on model for phase control, install noise filter between the load and the power of the load.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category III

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

SRH1 - ① ② ③ ④ - N

① Rated input voltage

- 1: 4 - 30 VDC=
- 2: 24 VAC~
- 4: 90 - 240 VAC~

② Rated load voltage

- 2: 24 - 240 VAC~
- 4: 48 - 480 VAC~

③ Rated load current

Number: Rated load current (unit: A)

④ Function

No-mark: Zero cross turn-on
R: Random turn-on

Product Components

- Product
- Instruction manual

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

A Input indicator (green)


- When installing to the panel, tightening the screw with a torque of 1.8 to 2.5 N m.

Rated load current 10 / 15 / 20 A

Rated load current 30 / 40 A

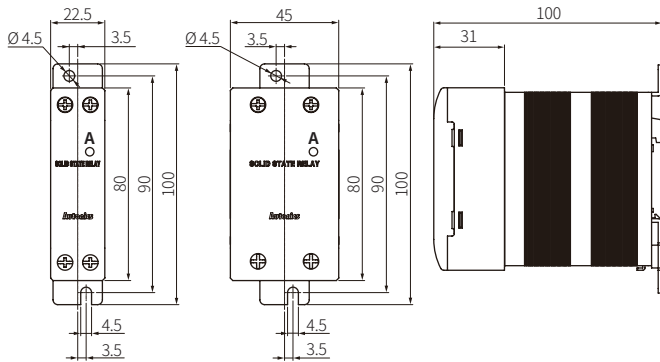


Rated load current 60 A

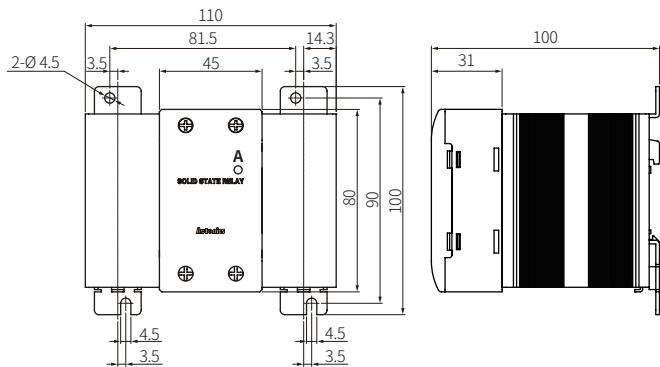

Panel cut-out

- Rated load current 10 / 15 / 20 / 30 / 40 A
- Rated load current 60 A

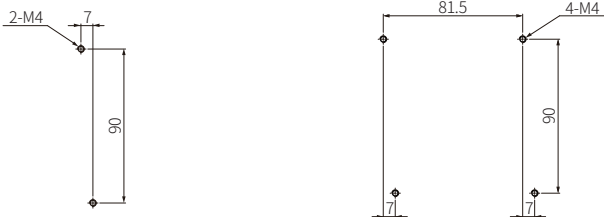


Cautions during Installation

Caution High Temperature

While supplying power to the load or right after turning off the power of the load, do not touch the body and heat sink. Failure to follow this instruction may result in burn due to high temperature of the surface.

Spacing

- When installing multiple SSRs, be sure to keep space between SSRs for heat radiation.
- When installing SSRs horizontally (input part and output part on the same height), be sure to supply less than 50 % of the rated load current.

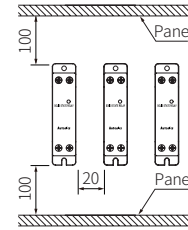


DIN rail mounting


- For attachment, hang the upper part of the Rail lock on the rear of the product to the DIN rail, and push the product toward the DIN rail.
- For detachment, Press the product down, and pull it forward.

Grounding

- Ground the DIN rail.

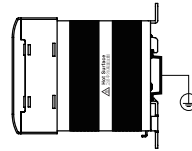


Connections

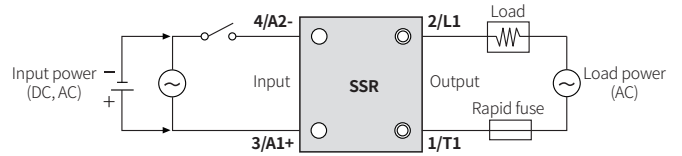

Cautions for Wiring

- Unit: mm, When connecting the wire to the terminal, use the round crimp terminal.

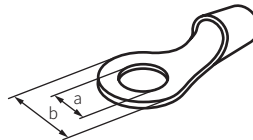

Size	Input	Output	
Rated load current	10 / 15 / 20 / 30 / 40 / 60 A	10 / 15 / 20 A	30 / 40 / 60 A
a	≥ 3.5 mm	≥ 4.0 mm	≥ 5.0 mm
b	≤ 7.0 mm	≤ 9.0 mm	≤ 12.0 mm

Specifications

Input

Rated input voltage range	4 - 30 VDC≡	24 VACrms~ (50 / 60 Hz)	90 - 240 VACrms~ (50 / 60 Hz)
Allowable input voltage range	4 - 32 VDC≡	19 - 30 VACrms~ (50 / 60 Hz)	85 - 264 VACrms~ (50 / 60 Hz)
Max. input current	18 mA	15 mA Arms (24 VACrms~)	18 mA Arms (240 VACrms~)
Operating voltage	≥ 4 VDC≡	≥ 19 VACrms~	≥ 85 VACrms~
Releasing voltage	≤ 1 VDC≡	≤ 4 VACrms~	≤ 10 VACrms~
Operating time	Zero cross turn-on	≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms
	Random turn-on	≤ 1 ms	-
Releasing time	≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms

Output

Rated load voltage range	24 - 240 VACrms~(50 / 60 Hz)						
Allowable load voltage range	24 - 264 VACrms~(50 / 60 Hz)						
Rated load current	Resistive load (AC-51) ⁰¹⁾	10 Arms	15 Arms	20 Arms	30 Arms	40 Arms	60 Arms
	Min. load current	0.15 Arms	0.15 Arms	0.2 Arms	0.5 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)	160 A	160 A	250 A	400 A	500 A	1000 A	
Max. non-repetitive surge current (I ² t, t = 8.3 ms)	130 A ² s	130 A ² s	300 A ² s	910 A ² s	1000 A ² s	4000 A ² s	
Peak voltage (non-repetitive)	600 V						
Leakage current (Ta = 25 °C)	≤ 10 mA Arms (240 VAC~/60 Hz)						
Output ON voltage drop [Vpk] (max. load current)	≤ 1.6 V						
Static off state dv/dt	500 V/μs						

Rated load voltage range	48 - 480 VACrms~(50 / 60 Hz)						
Allowable load voltage range	48 - 528 VACrms~(50 / 60 Hz)						
Rated load current	Resistive load (AC-51) ⁰¹⁾	10 Arms	15 Arms	20 Arms	30 Arms	40 Arms	60 Arms
	Min. load current	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)	300 A	300 A	300 A	500 A	500 A	1000 A	
Max. non-repetitive surge current (I ² t, t = 8.3 ms)	350 A ² s	350 A ² s	350 A ² s	1000 A ² s	1000 A ² s	4000 A ² s	
Peak voltage (non-repetitive)	1200 V (Zero cross turn-on), 1000 V (Random turn-on)						
Leakage current (Ta = 25 °C)	≤ 10 mA Arms (480 VAC~/60 Hz)						
Output ON voltage drop [Vpk] (max. load current)	≤ 1.6 V						
Static off state dv/dt	500 V/μs						

01) AC-51 is utilization category at IEC60947-4-3.

General specifications

Dielectric strength (Vrms)	Between the charging part and the case : 2500 VAC~ 50 / 60 Hz for 1 min
Insulation resistance	Input-output, input/output-case : ≥ 100 MΩ (500 VDC≡ megger)
Indicator	Input indicator (green)
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min
Shock	300 m/s ² (≈ 30 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times
Ambient temperature ⁰¹⁾	-30 to 80 °C (in case of the rated input voltage 90 - 240 VAC~ : -20 to 70 °C), storage: -30 to 100 °C (no freezing or no condensation)
Ambient humidity	45 to 85 %RH, storage: 45 to 85 %RH (no freezing or no condensation)
Input terminal connection	≥ 1 × 0.5 mm ² (1 × AWG 20), ≤ 1 × 1.5 mm ² (1 × AWG 16) or ≤ 2 × 1.5 mm ² (2 × AWG 16)
Output terminal connection ⁰²⁾	Rated load current 10 / 15 / 20 A : ≥ 1 × 0.75 mm ² (1 × AWG 18), ≤ 1 × 4 mm ² (1 × AWG 12) or ≤ 2 × 2.5 mm ² (2 × AWG 14) Rated load current 30 / 40 / 60 A : ≥ 1 × 1.5 mm ² (1 × AWG 16), ≤ 1 × 16 mm ² (1 × AWG 6) or ≤ 2 × 6 mm ² (2 × AWG 10)
Input terminal fixed torque	0.75 to 0.95 N m
Output terminal fixed torque	Rated load current 10 / 15 / 20 A: 1.0 to 1.35 N m Rated load current 30 / 40 / 60 A: 1.6 to 2.2 N m
Approval	CE, ENEC, RoHS, REACH
Weight (packaged)	Rated load current 10 / 15 / 20 A: ≈ 225 g (≈ 298 g) Rated load current 30 / 40 A: ≈ 410 g (≈ 500 g) Rated load current 60 A: ≈ 680 g (≈ 770 g)


01) See the 'SSR Derating Curve' in the product manual because the capacity of the rated load current is differ depending on the ambient temperature.

02) Connect the wire met the capacity of the load current to the output terminal.


SSR Derating Curve

- Be aware that the ambient temperature and the derating curve is different by the rated input voltage when using the product.
- ⚠ Since the effectiveness of the heat radiation is decreased when multiple SSRs are installed closely, be sure to supply less than 50 % of the rated load current.
- SSR derating curves obtained approval from the UL certification authority.


SRH1-1210 / 2210 / 4210-N

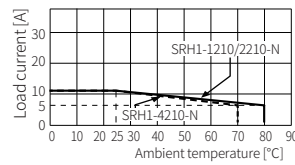


SRH1-1410 / 1410R / 2410-N

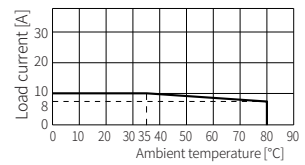


SRH1-1215 / 2215 / 4215-N

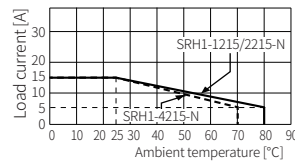


SRH1-1415 / 1415R / 2415-N

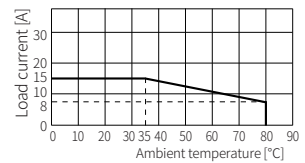


SRH1-1220 / 2220 / 4220-N

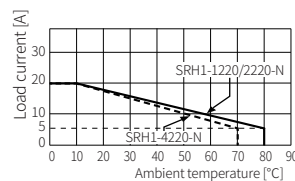


SRH1-1420/1420R/2420-N

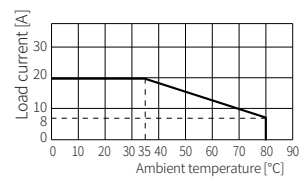


SRH1-1230 / 2230 / 4230-N

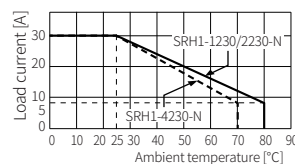


SRH1-1430/1430R/2430-N

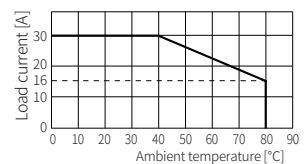

SRH1-1240 / 2240 / 4240-N

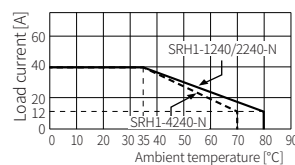

SRH1-1440/1440R/2440-N

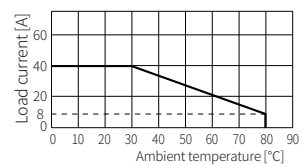

SRH1-1260 / 1460 / 1460R-N SRH1-2260 / 2460 / 4260-N

